


USER'S MANUAL

Before using the Pedal Lift, please read this user's manual in order to use it correctly. Also, please keep the manual for your future reference.


ASSIST PEDAL

*This knob is used to adjust force of the pedal.

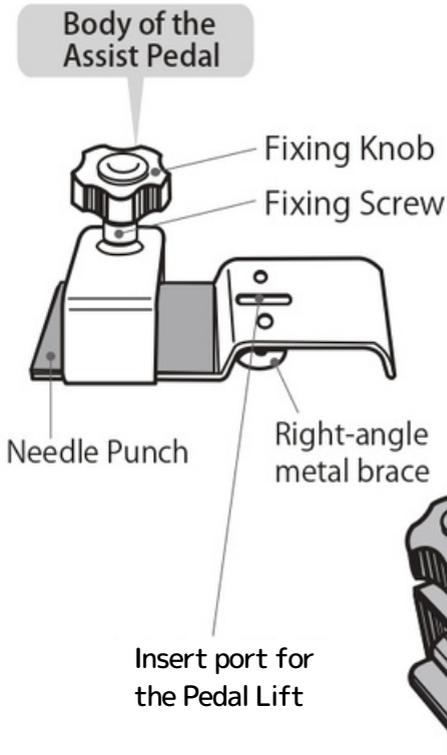


EXTENSION PARTS


*Extension Parts allows you to adjust the height of the Assist Pedal at 5 levels

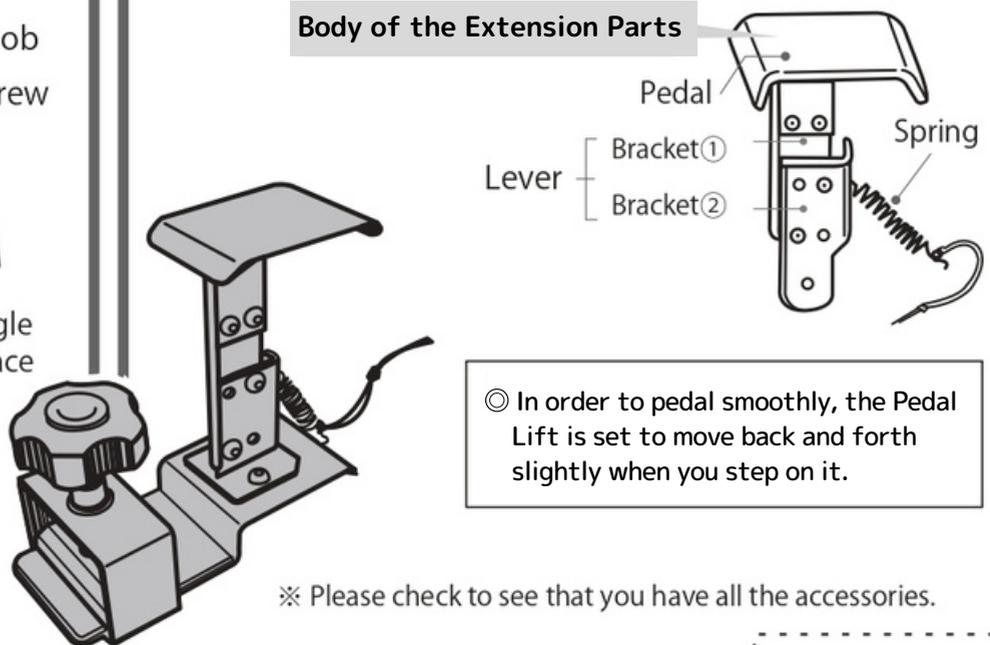


※ Please check to see that you have all the accessories.

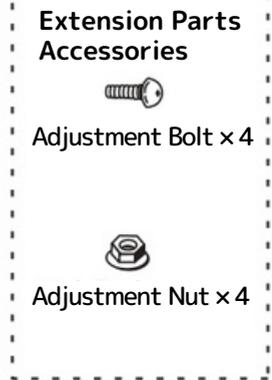


Assist Pedal Lift Set-up

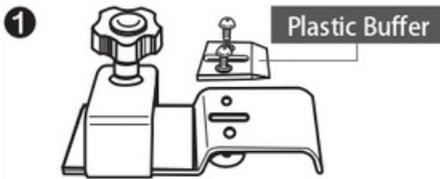


1 In order to prevent lateral movement of the Pedal Lift, attach the plastic buffer to the Assist Pedal.

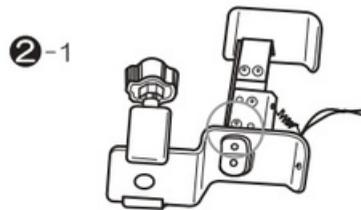


2-1 Align the right-angle metal brace on the bottom of the Assist Pedal with the bottom hole of the Extension Parts bracket 2 and put the fixing bolt through both holes.

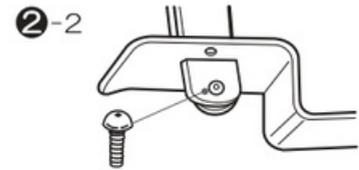


2-2 The fixing bolt should be put through both holes from the bracket's side, then tighten the bolt with the hexagonal wrench.

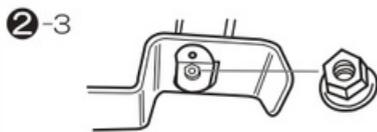

2-3 While holding the bolt with the hexagonal wrench, use the spanner to tighten and fix the nut on the other side. Tighten the nut enough to allow the lever to move smoothly when pulling the spring in procedure No. 3.

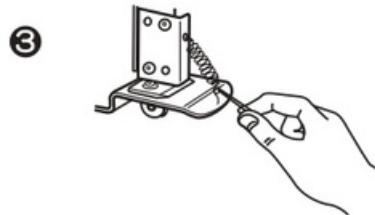

3 Pull the string tied to the spring attached to the Pedal Lift and hook the bottom into the small hole at the tip of the Assist Pedal to secure it.

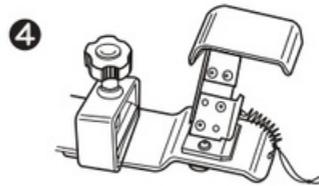


Completion drawing

4 The height can be adjusted to 5 levels. Use the Pedal and Bracket 2 for levels 1~2. Use the Pedal and Brackets 1 and 2, for levels 3~5.

Method for attaching the Assist Pedal

Before fitting the Assist Pedal:

- ① Remove the plastic cover and any other covers from the piano pedal.
- ② In some cases, the surface of the piano pedal might be covered with oil or wax. Wipe this off well with a neutral detergent, etc.

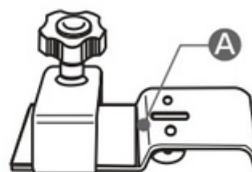

Insert Pedal Lift into a piano pedal. Make sure there is a space, do not let the tip of the piano pedal touch the surface of part A - then turn the Fixing Knob to secure the pedal.

● MAINTENANCE

- When the Needle-punch carpet and the rubber wear out, replace them. (The rubber is synthetic rubber, 1mm thick - use instant adhesive to fix it. The needle-punch carpet is 3mm thick - use Silix bond to fix it).
- Put grease regularly on the tightening screw. Wipe off excess grease.
- Keep the rubber clean with a neutral detergent. Dirty rubber can cause slipping.

● PRECAUTIONS WHEN USING

- If some rough surfaces remain around the edges of the metal spring or metallic accessories, they can cause injury. Please be cautious when using them.
- When the plastic buffer wears out, change it to a new one.
- If you loosen the Fixing Knob too much, in some cases the metal fittings will come off. Please do not loosen past the knob's limit.